


Replacing Felt Strip on the Cleaning Pad


Spare Parts: Replacement Felt Strips KX-PRFSA

How to do it:

1. Remove Fuser Unit from Printer.

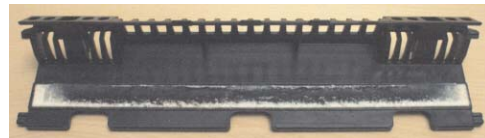


→ 2. Remove Cleaning Pad from Fuser Unit. If the Pad looks like this you should replace the Felt Strip (or the complete Pad).

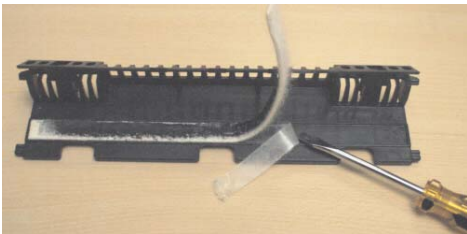

3. Take out the old Felt Strip. **Tip: Lift up one edge of the strip and the adhesive and put a few drops of Lighter Fluid/Zippo/Benzine in between the plastic and the adhesive. This helps to easily release the adhesive!**



4. Remove the paper from adhesive of the Replacement Strip.

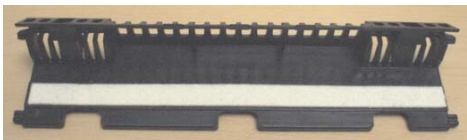

5. Place new Strip into the empty gap and press firmly into it.



6. Insert Cleaning Pad back into the Fuser Unit and Fuser back into Printer.